4/05/2007



VISIT THE LIFETIME WEB SITE: WWW.LIFETIME.COM


** Do Not Contact the Store **

For Assistance, including missing or broken parts, Call Customer Service at:

1 (800) 225-3865

30" Shed Extension Kit for Existing
11' Sheds
MODEL #0125

ASSEMBLY
INSTRUCTIONS AND
OWNER'S MANUAL

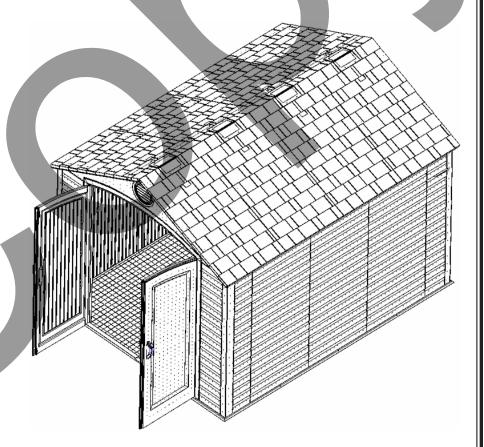

Save this instruction in the event you must contact the manufacturer for replacement parts.

A MINIMUM OF TWO ADULTS ARE REQUIRED FOR ASSEMBLY



BEFORE BEGINNING ASSEMBLY



Identify and inventory all parts using the checklist boxes on the Parts List. Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.



SAFETY INSTRUCTIONS




Failure to follow these safety instructions may result in serious injury or property damage. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this display is not installed, maintained, or operated properly. • If using a ladder during assembly, use extreme caution. Follow all warnings and cautions on the ladder carefully. • 2 people are required for assembly. • Misuse could result in system failure. • If technical assistance is required, contact the manufacturer.

Most injuries are caused by misuse and/or failure to follow instructions.


PARTS LIST

AA	1020443	Center Roof Cap	1
AB	1019503	Gutter Channel	2
AC	1007977	Wall Support Channel	2
AD	1007988	Truss Channel	1
ΑE	1007996	Inner Roof Panel	2
AF	1007997	Wall Panel	2
AG	1009232	Skylight	1
AJ	1008000	Inner Floor Panel	2
AK	1008001	Roof Support Strip	4
AM	1020423	Truss Support Strip	2
Shed Parts Box [1019238]			
Skyl	ight Hardwa	re Bag [1011616]	1
LA	BW01200	#10-1" Fender Washer	7
LB	1010132	#10 x 5/8" Pan Head Screw	v 7
Truss Extension Hardware Bag [1016014] 1			
FA	1009117	Floor Bracket	2
FB	300072	1/4" x 1 1/2" Hex Bolt	11
FC	BN00300	1/4" Cap Nut	11
FD	1012933	Center Gutter Connector	1
Shed Screw Hardware Bag [1011615]			1
SS	BS07500	1/4" x 5/8" Screw	60

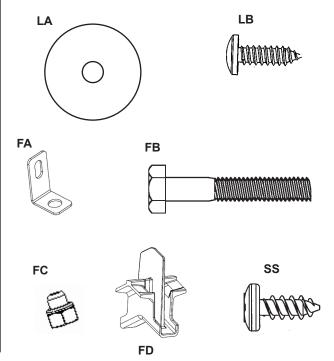

Tools and Materials Required for Assembly (Not Included)

- 1. 7/16" Wrenches (2)
- 2. 3/8" Wrenches (2)
- 3. #2 Phillips screwdriver or Electric drill with phillips head

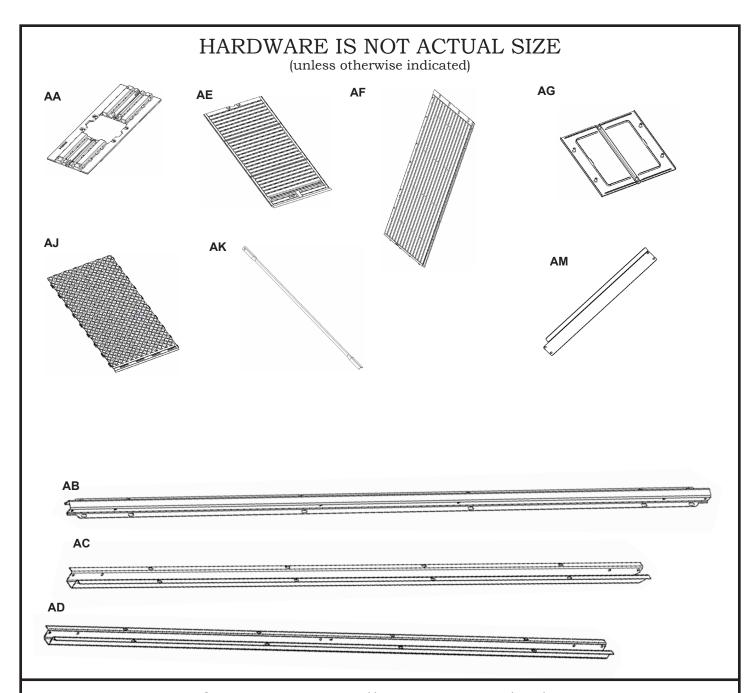

If you are Extending an New Shed

1. To obtain instructions for extending a new shed, contact our Customer Service Department.

To extend a never assembled shed, Call Customer Service for Instructions:

1 (800) 225-3865


Site Selection

a. This extension kit adds another 30" to the length of your shed. Before beginning expansion of your shed be sure that your site can accommodate the new size.

Option 2: Add Extension Kit to an Existing Shed **Save all hardware for re-assembly!**

ATTENTION: If your existing shed is anchored to the ground, remove all anchoring hardware before following these steps.


Opt. 2.1: Remove the four Lower Roof Panels and two Center Roof Caps (leave Skylights in place) that are highlighted below.

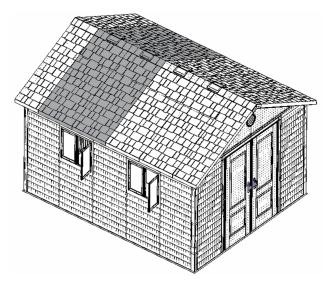


Note: Your shed may be shorter than shown above. Skip the very back Roof Panels (slightly more narrow than the middle Roof Panels) and then remove the next two Roof Panels from each side of the shed (along with the connected Roof Caps).

Repeat Steps 2.2 through 2.4 for both sides of the shed.

Opt. 2.2: Remove all screws from the highlighted Wall Panel that connect it to adjoing Wall Panels and to the Wall Support.

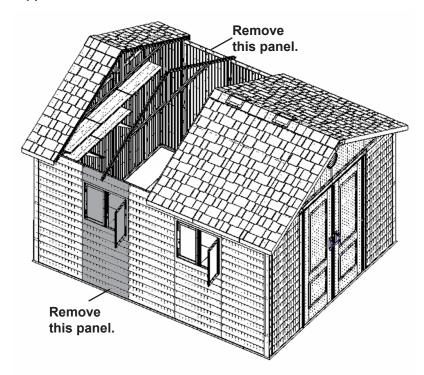


Opt. 2.3: Tip the Wall Panel inward.

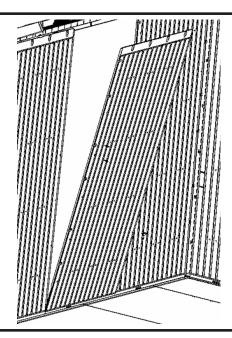


Note: To remove a Wall Panel, slide it to the left (when looking at it from inside the shed) until it lifts out.

Opt. 2.4: Use a long flat screwdriver to gently pry the bottom corner of the Wall Panel so that it has room to slide on the inside of other Wall Panels. Slide the Wall Panel to the left, and then remove the panel.

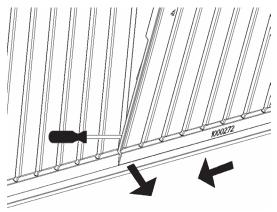


Note: As you remove the Wall Panels, have one person support the Truss assembly so that it does not fall over.


Opt. 2.5: Remove the Truss assembly and set it aside for later.

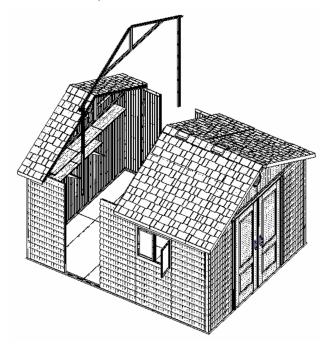


Opt. 2.6: With at least on person on each side of the shed, tip the back section of the shed forward to about a 45 degree angle and slide the back section away from the shed..

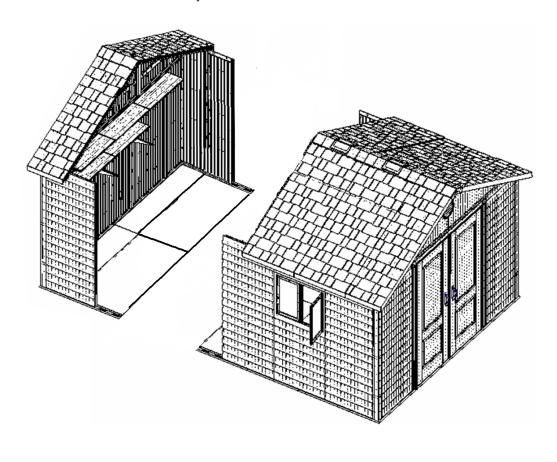

Opt. 2.7: Fit together the two Inner Floor Panel extensions (AJ).

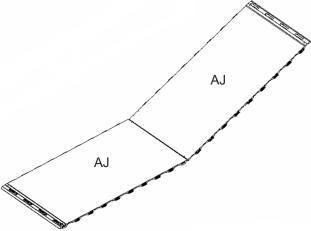


Opt. 2.8: Connect the Inner Floor Panel extensions (AJ) to the other Inner Floor Panels on the main section of the shed.

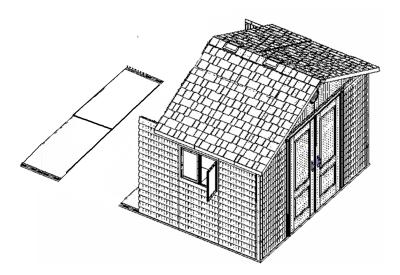


Opt. 2.9: With at least on person on each side of the shed, tip the back section of the shed forward to about a 45 degree angle and slide it forward to re-connect it to the rest of the shed.

Opt. 2.10: Fit two Truss Support Strips (AM) together. Bolt Truss Support Strips (AM), Center Gutter Connector (FD) and two Gutter Channels (AB). Refer to the Owner's Manual that came with your shed when assembling other truss frames.

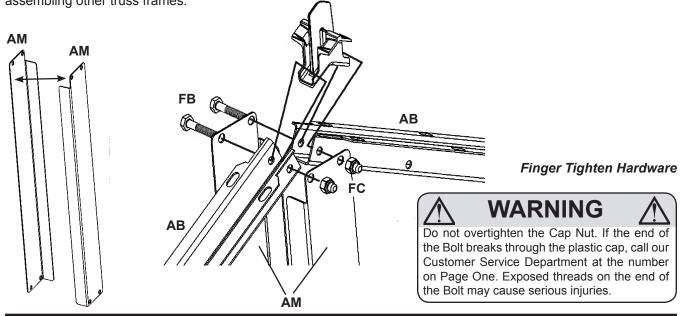


Opt. 2.11: Attach a Gutter Channel (AB) (Truss Support Strips (AM) fit inside Gutter Channel (AB)). Attach Truss Channel (AD) to Gutter Channel (AB) at each end.

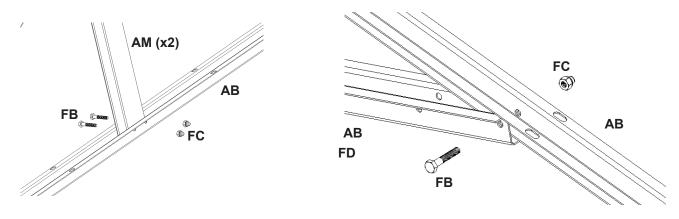


Tighten All Hardware

Opt. 2.12: Attach Truss Assembly to two Wall Support Channels (AC). Do not completely tighten the Cap Nut (FC) until after truss is secured to the wall.

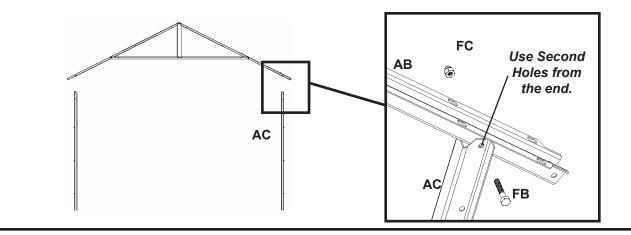

Opt. 2.13: Replace the two Wall Panels that were previously removed. Add the two new Wall Panels that came with this kit.


Note: As new panel slides into place be sure that screw bosses along the sides interlock properly with the adjoining Wall Panels.

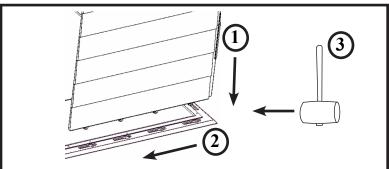


- 1. Set Wall Panel Tabs into Floor Panel Slots.
- 2. Slide Wall Panel to the left until the Wall Panel locks into place.
- 3. Use a Rubber Mallet to nudge the panel into position. Be careful not to damage the edge of the wall panel.

Opt. 2.14: Replace the Truss assembly that was previously removed. Add the new Truss assembly from steps 2.9 to 2.11.


Opt. 2.15: Replace the four Lower Roof Panels that were previously removed. Add the two new Lower Roof Panels that came with this kit.

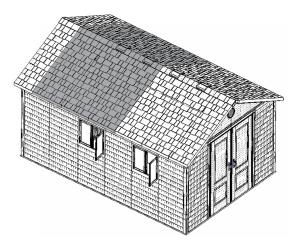

Opt. 2.16: Install the Skylight (AG) into the Center Roof Cap (AA) that came with this Kit.

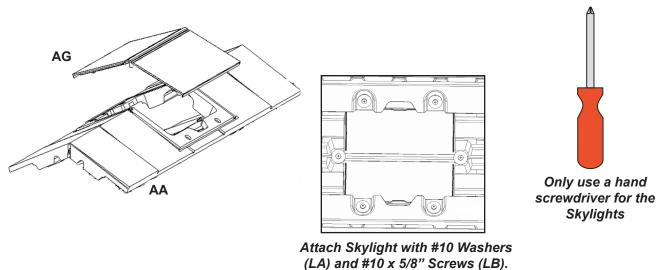

Opt. 2.17: Install both Center Roof Caps (with Skylights) onto the shed.

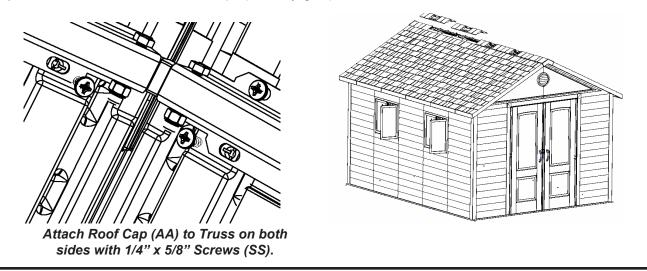

Enhance your Lifetime® Outdoor Shed by purchasing the following Shed Accessories:

Model #	
0111	Window Shutters
	Two decorative window shutters.
0112	Shed Lights (2 pack)
	Two battery powered Touch Lights.
0113	16" Pegboard Strips w/ hardware
	Two sixteen inch Pegboard Strips with hooks. Great for hanging large items such as:
	rakes, shovels, or other tools.
0114	10" Shelf Kit w/ hardware (5 pack)
	Five 30" x 10" Shelves with hardware.
0115	14" Shelf Kit w/ hardware (5 pack)
	Five 30" x 14" Shelves with hardware.
6426	60" Shed Extension Kit w/ 2 windows
	Extend your shed five feet for the ultimate storage building.

To purchase shed accessories, visit us at: www.buylifetime.com

Or call: 1 (800) 424-3865

Congratulations on your Lifetime® Outdoor Shed purchase. By following the instructions below, your new Lifetime shed should provide you with years of service and enjoyment.

Cleaning and Care

The polyethylene walls and shelves are stain- and solvent resistant. To clean, use a mild soap and a soft-bristled brush. Abrasive cleaning materials may scratch the plastic and are not recommended. Repair scratches or rust spots on the metal by Sanding the affected area lightly; using a rust preventative spray primer; and finally, spraying with a high-gloss spray enamel paint. Avoid placing a direct heat source on or near surfaces unless using a heat barrier.

For warranty details or to register your product, visit www.lifetime.com or call 801-776-1532