

Instruction Sheet — Overhead Projector Carts

Endura Models OHT-30 and OHT-40

Congratulations for having chosen an excellent Luxor product.

Luxor products are fully warranted. Endura Overhead Projector tables will not chip, scratch or dent. They are easy to assemble. Your choice of the Endura will assure you of long product life with minimum maintenance and continuing good appearance.

Your purchase is backed by Luxor's satisfaction guarantee. Luxor is a service oriented company. As a service to you, we are enclosing a "satisfaction guaranteed" request card. Should

a problem arise needing our assistance simply fill out the card and fax it to us toll-free or mail postage paid to Luxor. Be sure to include your telephone number. Upon receipt of your service request, we will give it immediate attention to be sure that you will be completely satisfied with your purchase.

Thank you for your confidence.

Customer Service Department
LUXOR

2245 Delany Road
Waukegan, IL 60087



LUXOR | H. WILSON

2245 Delany Road
Waukegan, IL 60087

Phone: 1-800-323-4656

Fax: 1-847-244-1818



OHT-30



OHT-40

PARTS LIST

OHT-30

1-Bottom shelf w/cut-out
1-Middle shelf
8-Long legs
4-Short legs
4-Casters, 2 w/brake
1-(2 piece) OH top shelf


OHT-40

1-Bottom shelf w/caster sockets
1-Middle shelf
4-Long legs
4-Medium legs
4-Short legs
4-Casters, 2 w/brakes
2-OH side shelves
1-(2 piece) OH top shelf

Tools Required: 1-Rubber mallet 1-Slotted screwdriver

Electrical Assembly: 1-Power cord assembly 2-E-clips


1-Cord wrap bracket 4-Sheet metal screws 1-Plug housing cover
1-Power cord plug retaining bracket

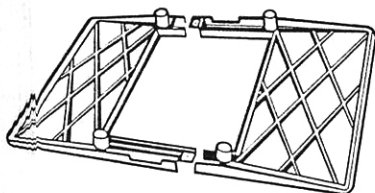

11

Lay two halves of top shelf, ribbed side up, on a smooth surface as illustrated.

THE NON-USED SIDE MAY BE COVERED WITH THE ENCLOSED ELECTRICAL HOUSING COVER.

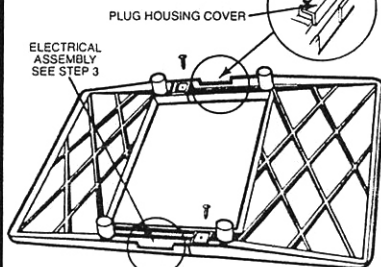


2

Join both halves, set 2 sheet metal screws into pre-drilled shelf holes as shown, and secure.


Cover the side not using the electric with the plug housing cover.

ELECTRICAL ASSEMBLY

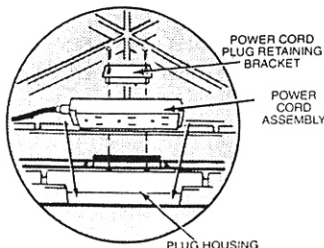


3

Set power cord assembly into plug housing and keep cord off to one side. Secure power cord plug with power cord plug retaining bracket as illustrated. Power cord will be attached to cord wrap bracket later.

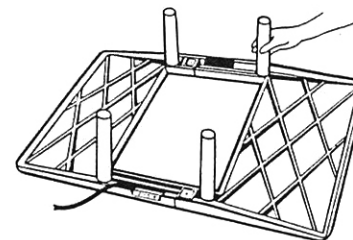


4

Push 4 short legs onto leg posts of top shelf.
NOTE: Model OHT-30 and OHT-40 include an extra set of legs to allow you to match the height of your overhead projector.

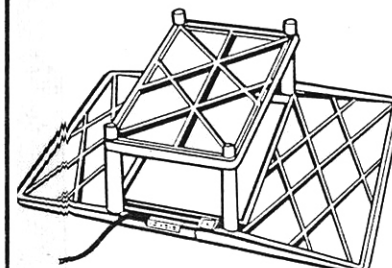


5

Position center shelf (with 8 leg posts), ribbed side up, over the legs and insert leg posts into legs. Using a rubber mallet, firmly hammer shelf into legs until all four legs are seated (flush) against the surfaces of both shelves.

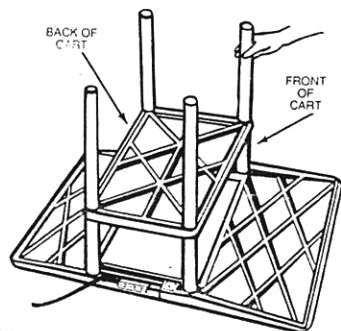

6


Push 4 legs onto leg posts of middle shelf.

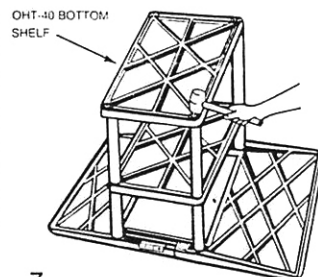

7

Model OHT-40: Position bottom shelf, ribbed side up, over the legs and insert leg posts into legs. Using a rubber mallet, firmly hammer shelf into legs until all four legs are properly seated against the surface of both shelves.


Model OHT-30: Use bottom shelf with cut-out.

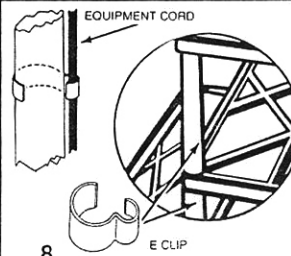

8

Each unit comes complete with two E clips as shown above. These fit to the legs. Position E clip as shown. Route your cords going to equipment on lower shelf through clips for a safe and organized cord management system.

Wrap remaining cord around the cord wrap bracket. For safety and neat appearance, secure cord plug to cord by utilizing plug snap.

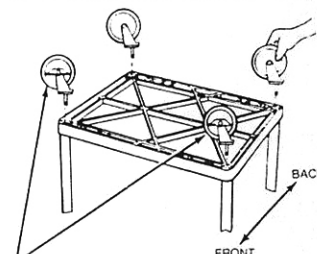

9

Push the four casters firmly into the holes in each corner of the bottom shelf. **Important:** casters must be fully seated. Tap firmly with rubber mallet to properly seat casters. Turn your Endura Overhead Table right side up, it is now ready for use.