



30" Outdoor Shed Extension Kit





VISIT THE LIFETIME WEB SITE:
WWW.LIFETIME.COM

**** Do Not Contact the Store ****
For Assistance, including missing or broken parts,
Call Customer Service at:
1 (800) 225-3865

Landmark
30" Shed Extension Kit
MODEL #6422

ASSEMBLY INSTRUCTIONS AND
OWNER'S MANUAL

****A MINIMUM OF TWO ADULTS ARE REQUIRED FOR ASSEMBLY****

STOP! **BEFORE BEGINNING ASSEMBLY** **STOP!**
Identify and inventory all parts using the checklist boxes on the Parts List. Keep the hardware bags and their contents separate. If any parts are missing, call our Customer Service Department.

 
 
SAFETY INSTRUCTIONS
Failure to follow these safety instructions may result in serious injury or property damage. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this display is not installed, maintained, or operated properly. • If using a ladder during assembly, use extreme caution. Follow all warnings and cautions on the ladder carefully. • 2 people are required for assembly. • Misuse could result in system failure. • If technical assistance is required, contact the manufacturer.
Most injuries are caused by misuse and/or failure to follow instructions.

Save this instruction in the event that the manufacturer has to be contacted for replacement parts.

PARTS LIST

ID	Part #	Description	Qty
108	ZS10882	Wall Panel	2
136	CB11099	Center Floor Panel	1
114	CB11480E	Lower Roof Panel	2
117	CB11780C	Center Roof Cap	1
AA	CH08580	Skylight	1
AB	AR02406	Roof Truss Channels	2
AC	1001866	Roof Truss Brace	1
AD	ZS01006	Roof Support	2
Hardware Bag [1001885]			
TA	1001865	Truss Connector	1
TB	BB04500	Threaded Rod	1
TD	BN00300	1/4" Cap Nut	2
TE	BN01600	#10 Cap Nut	6
TF	BS06100	#10 x 3/8" Pan-Head Screw	6
TH	BS07500	.25" x .625" Screw	40
TI	BS05900	#10 x .5" Pan-Head Screw	6
TJ	BW01200	#10-1" Fender Washer	6

HARDWARE IS ACTUAL SIZE
(unless otherwise indicated)

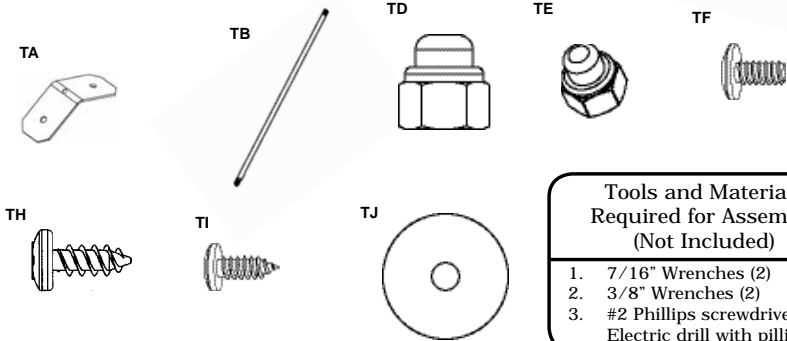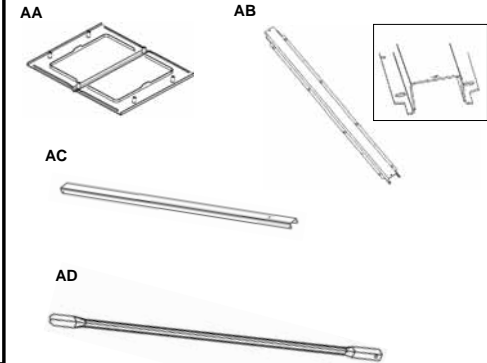

**Tools and Materials
Required for Assembly
(Not Included)**

1. 7/16" Wrenches (2)
2. 3/8" Wrenches (2)
3. #2 Phillips screwdriver or Electric drill with Phillips head

If you are Installing a New Shed

1. Check contents of boxes and compare to parts listed on the Parts List.
2. Follow instructions that came with your shed, but add extra floor panel, wall panels, Roof Cap and Skylight at appropriate points in the assembly.

If you are Extending an Existing Shed


1. Remove any objects from back shelves.
2. Remove any shelves, pegboards, or other objects hanging on the last two Side Wall Panels on either side.
3. Check contents of boxes and compare to parts listed on the Parts List.
4. Follow the steps in this manual.
5. If you are extending an 8' x 5' shed you will need to modify the following instructions by not removing as many parts as shown in the illustrations.

****Save all hardware for re-assembly!****

 Note: Keeping hardware separated according to where it came from will make reassembly easier.


1

- a. Remove last three skylights. Save and set aside hardware with the skylights.

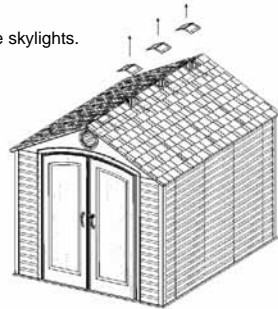


2

 - a. Remove the last three roof caps. Save and set aside hardware with the roof caps.

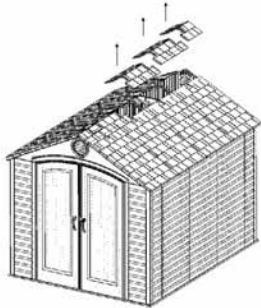


3

 - a. Remove the back roof panels and roof support bars. Save and set aside hardware with the roof panels and roof support bars.

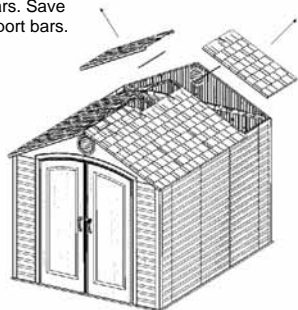

4

 - a. Remove the next Roof panels and Roof support bars. Save and set aside hardware with the roof panels and roof support bars.

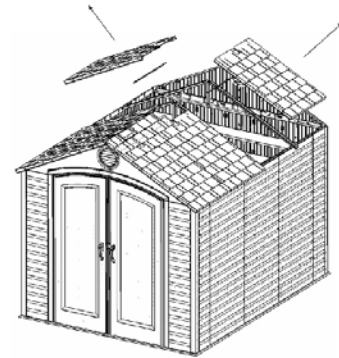


5

- a. Remove the Roof Truss. Save and set aside hardware with the Roof Truss.



6

 
- a. Remove the last two Side Wall Panels. Save and set aside hardware with the walls.

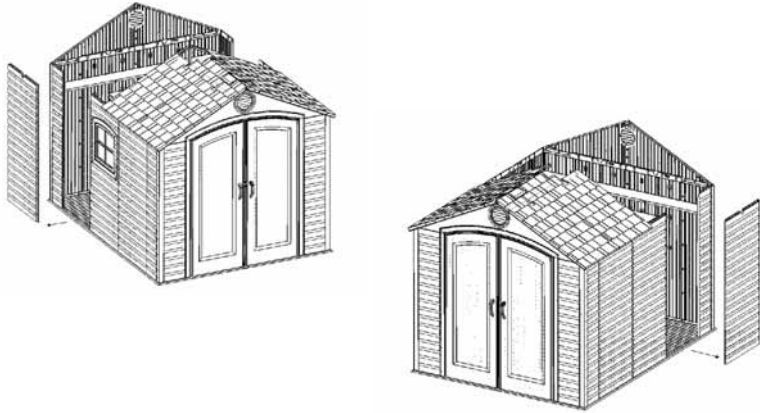

7



- a. Slide the back section of the shed away from the front. You will need to tip the back section forward slightly in order to disconnect the floor panels

 Be sure that there is nothing on the back shelves before moving the back section.

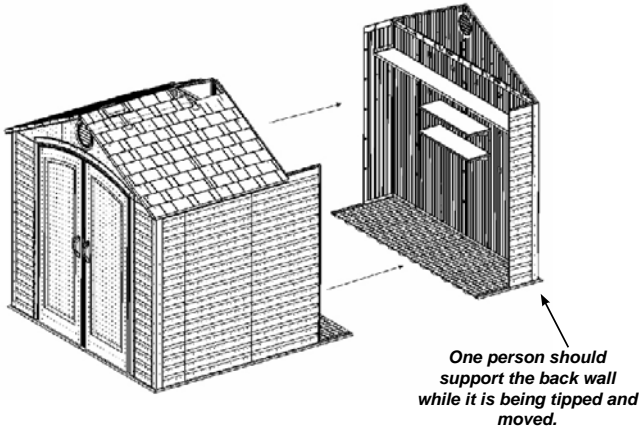



8

  - a. Add new floor panel. Then slide the back section into place and connect the floor panels (you will need to tip the panels forward slightly to connect the panels).

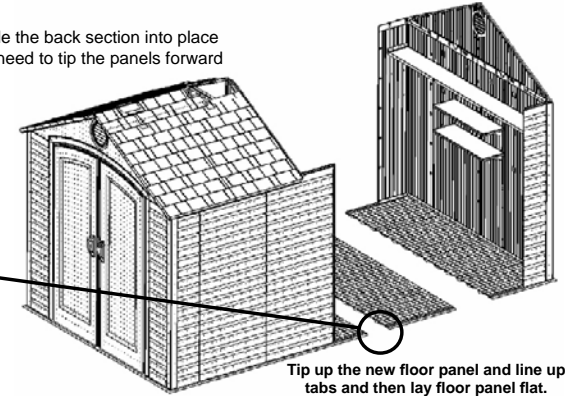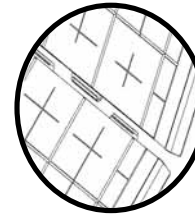


9

  - a. Add Wall panels. Attach the new Wall panels to the adjoining Wall panels and Corner panels with Screws (TH).

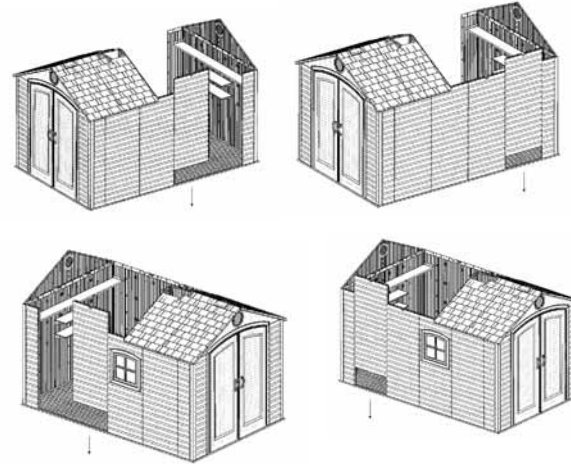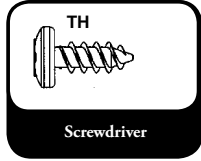


 Second person should apply pressure on opposite side of the wall for easy insertion of screws.

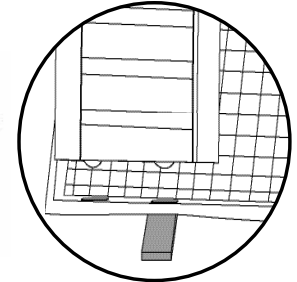



Insert a wood block directly under the tab you want to insert, then slide block to next tab and repeat.

 Do Not Over-Tighten Screws

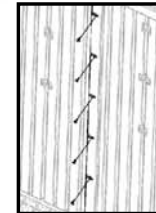


10 Assemble Truss

  
- a. Attach Brace (AC) to two Roof Truss Channels (AB) (one on each side of Brace). Secure Brace with screws (TF) and nuts (TE).

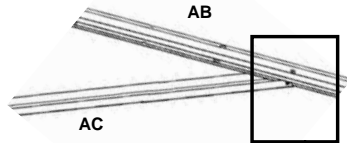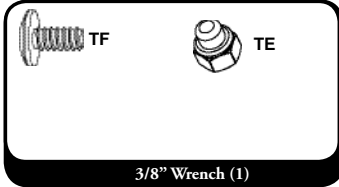

Follow picture above to connect Brace to a Truss Channel at each end of the Brace.

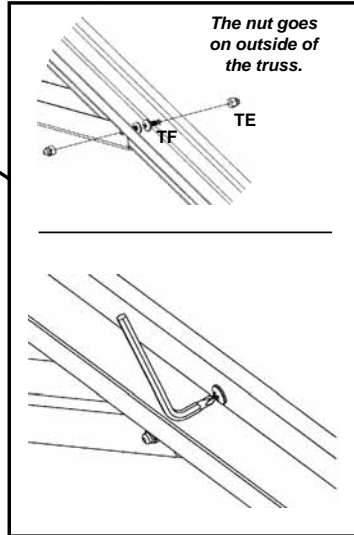 


 Use L-key (included with original shed packaging) to hold screw (TE) in place while tightening nut (TE).





- b. Use Truss Connector (TA) to attach Roof Truss Channels at top. Secure with screws (TF) and nuts (TE). Before completely tightening, lay assembly on its side to be sure Channels and Brace are parallel. Completely tighten all hardware.


 
Be sure that Truss Connector is aligned with the Truss Channels.

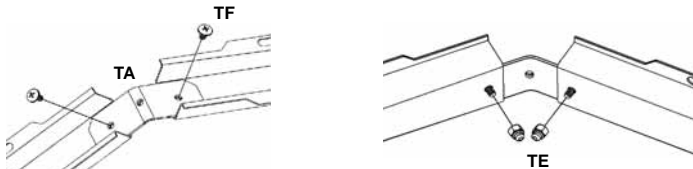

  - c. Slide a Threaded Rod (TB) through the Truss Support Brace and the top of the Truss Connector.

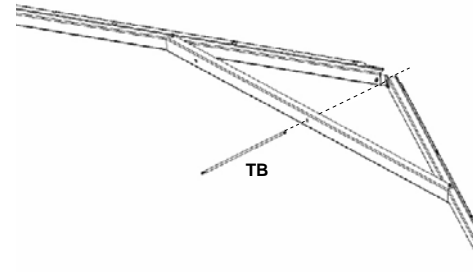
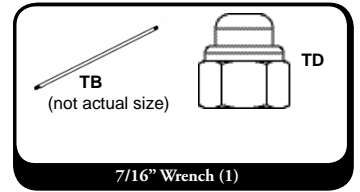


  - d. Secure the top and bottom of the Threaded Rod with a 1/4" Cap Nut (TD).

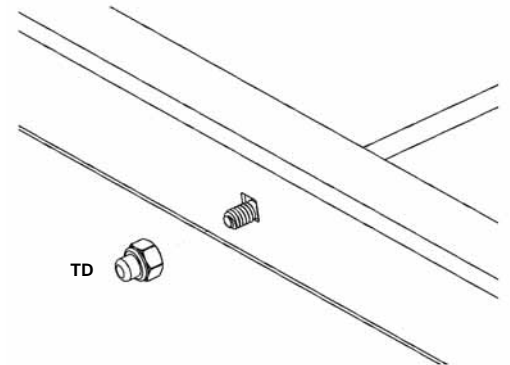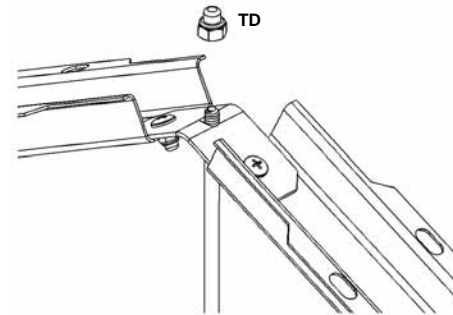

11

  a. Add first Truss.

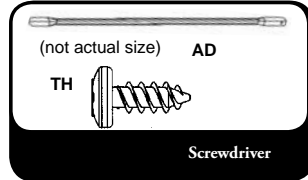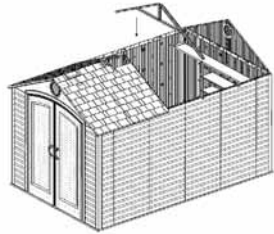


12




Use a flashlight to check that holes line-up before inserting screws.

 a. Secure the Roof Panel to the Truss Channel with all but the very top screws (TH). Slide the metal Roof Support (AD) into place between the Roof Panel and Gable/Truss. Insert top screws. Then attach Roof Panel to Wall panels.

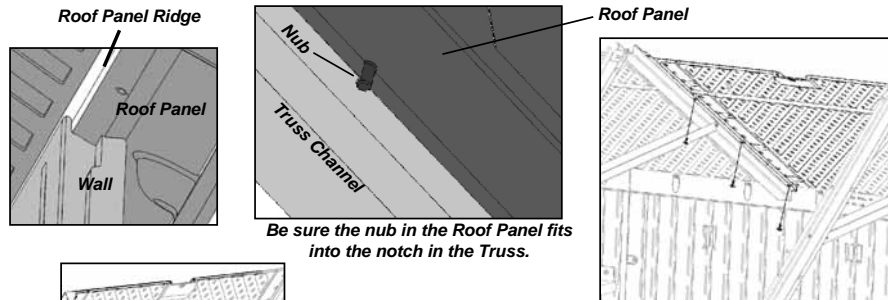


 Be sure the nub in the Roof Panel fits into the notch in the Truss.




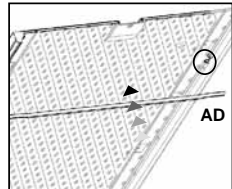


The Roof Support (AD) fits into the notches in the Roof Panel (as shown).

 A second person on a ladder should apply downward pressure while attaching roof parts.



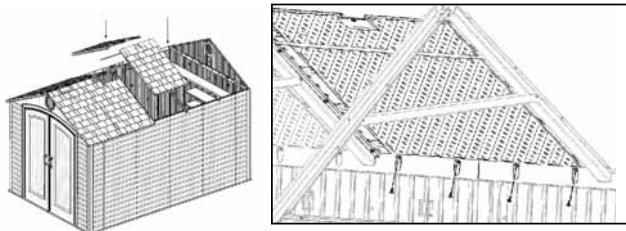


    b. Position Roof Cap next to secured Roof Cap. Attach to Truss and Roof cap with screws.

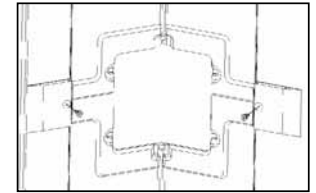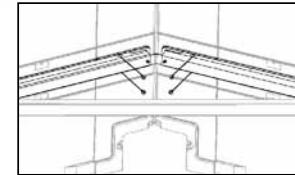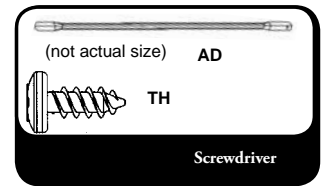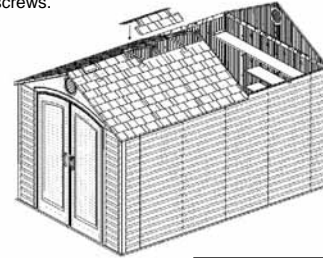



13

   a. Add last Truss.
b. Roof panels and Roof Supports Roof Cap as shown and described in step 12.

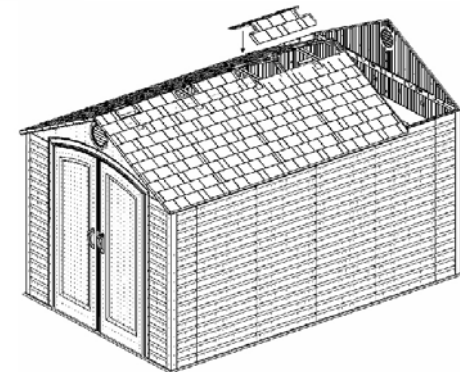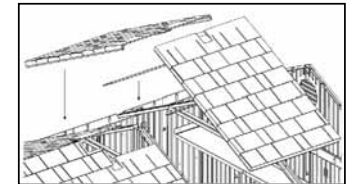
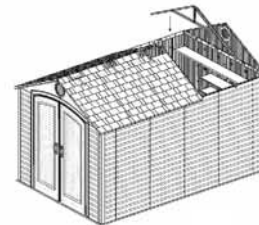


15

  a. Add last the Roof panels and Roof Supports as shown in step 12.

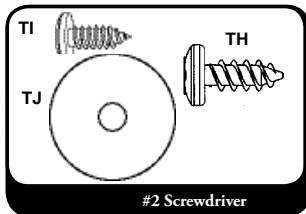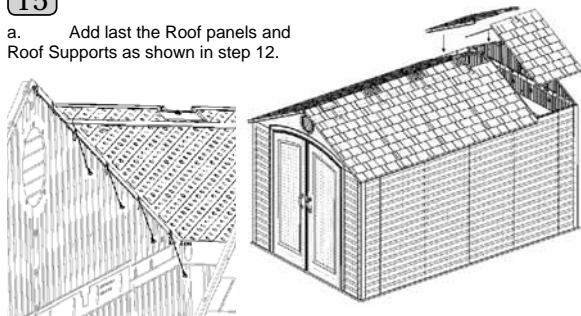

 
 
b. Add the last Center Roof Cap and the End Roof Cap.

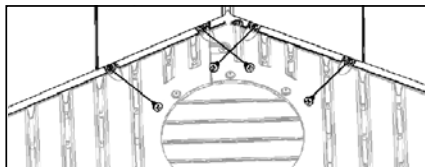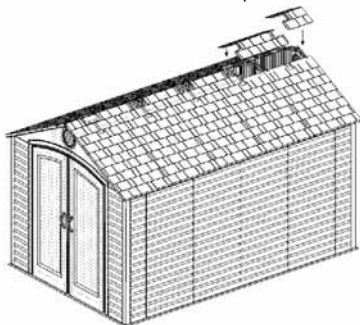

16

a. Push folded skylights up through openings; open skylight; use tabs to pull skylight down into place.

  b. Fasten skylights in place with screws (pull on tabs while inserting screw to provide resistance).

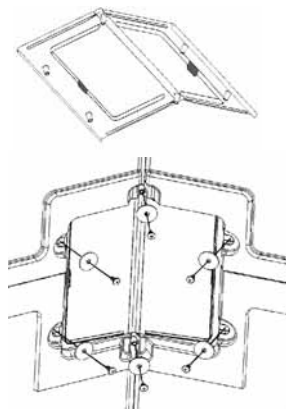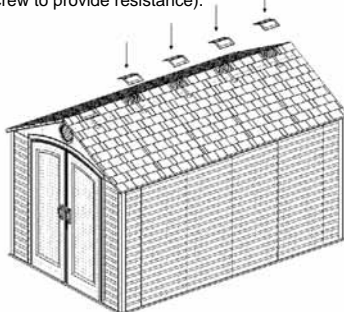

Enhance your Lifetime® Outdoor Shed by purchasing the following Shed Accessories:

Model #

0110

Corner Shelf (2 pack)

Two battery powered Touch Lights.

0130

32" Shelf Kit w/ hardware (3 pack)

Three 32" x 10" Steel-Reinforced Shelves with shelf brackets and hardware.

0150

8' Shelf Kit w/ hardware

One 96" x 9" Steel-Reinforced Shelf with shelf bracket and hardware.

0170

Pegboard w/ hardware

One 22.5" x 22.5" Pegboard Panel with hooks. Great for hanging large and small items such as: rakes, shovels, and hand tools.

0190

Shelf Support Channel

Two Shelf Support Channels that allow the 32" shelves on either of the side walls of your shed.



 
0110



0130



0150

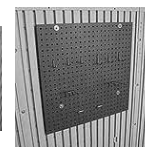

0170

**To purchase shed accessories,
visit us at:**

www.buylifetime.com

Or call:

1 (800) 424-3865

Congratulations on your Lifetime® Outdoor Shed purchase. By following the instructions below, your new Lifetime shed should provide you with years of service and enjoyment.

Cleaning and Care

The polyethylene walls and shelves are stain- and solvent resistant. To clean, use a mild soap and a soft-bristled brush. Abrasive cleaning materials may scratch the plastic and are not recommended. Repair scratches or rust spots on the metal by Sanding the affected area lightly; using a rust preventative spray primer; and finally, spraying with a high-gloss spray enamel paint. Avoid placing a direct heat source on or near surfaces unless using a heat barrier.

**For warranty details or to register your product, visit
www.lifetime.com or call 801-776-1532**

LIFETIME OUTDOOR SHED EQUIPMENT

10-YEAR LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

1. Lifetime outdoor sheds are warranted to the original purchaser to be free from defects in material or workmanship for a period of ten years from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.
2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective product. If the product is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the shed or its components are not covered under this warranty.
3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the truss will void this warranty.
4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
5. This product is not intended for institutional or commercial use; Lifetime Products, Inc. does not assume any liability for such use. Institutional or commercial use will void the warranty.
6. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product.

ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY A SALES RECEIPT.

REPORT PRODUCT DEFECTS IN WRITING TO:

Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010
or call (800) 225-3865 M-F 8 a.m. to 5 p.m. MST.

Please include your dated sales receipt and photographs of damaged parts.

To register the product, visit our website at www.lifetime.com



www.lifetime.com

©2004 Lifetime Products, Inc.

PO Box 160010 • Freeport Center, Bldg. D-11 Clearfield, Utah 84016-0010
T: 800-225-3865 • F: 801-728-1907