


Spenco for Her®

QFACTOR® CUSHION

Replacement Insoles for Women

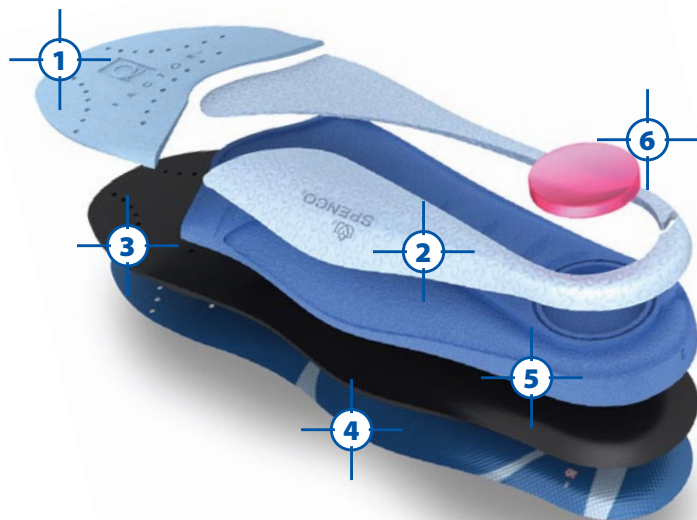

Cat. No. 44-545



PERFORMANCE

Balanced Cushioning—Designed for Women

Target Consumer:

Active women seeking softer cushioning with the stability of Q Factor® Technology.

Recommended For:

Increased shock absorption.
Advanced support for the arch and heel.
Improved motion control to reduce pronation and supination.



Best For Use In:

Athletic, tennis, basketball and training shoes with removable insoles.



Components*:

PU, EVA, TPU, PU Gel, SpenCore® Material
Fabric, Thickness at Heel: 8.26mm (3/8in)
Thickness at Forefoot: 4.50mm (3/16in)



Instructions:

Remove existing insole (some brands of shoes glue the insole to the shoe, but careful removal will not damage the shoe). Insert the Spenco For Her® Replacement Insoles into the shoe. Trim with scissors if necessary.



Care:

Hand wash in warm water. Air dry.

Features & Benefits:

- 1 **EVA Forefoot Padding** extra forefoot cushioning helps comfort and relieve pain under the ball of foot.
- 2 **Q Factor® Technology** Specifically designed for women to help control the Q-Angle providing proper support and alignment.
- 3 **SpenCore® Material** Exclusive cushioning layer absorbs shock and impact to provide maximum comfort.
- 4 **Low Friction Top Cloth with Silpure Antimicrobial** helps prevent blisters while controlling odor.
- 5 **Contoured POLYSORB® Polyurethane Foam** design helps cradle the heel and support the arch to create the Q Factor® Technology.
- 6 **Gel Heel Strike Cushion** absorbs shock and returns energy in the key impact zone.

One-Year Unconditional Guarantee

Sizing Chart:

Size	0	1	2	3	4
U.S. Women's	3/4	5/6	7/8	9/10	11/12
U.K.	2/3	4/5	5/6	7/8	9/10
European	32/34	36/38	38/40	40/42	42/44

Call toll-free: 1-800-877-3626
In Canada: 1-800-387-9538

 www.spenco.com



*Measurements are approximate and vary by size.
Silpure is a Registered Trademark of Thomson Research Associates, Inc.