


F5105

**FRANKLIN**  
CLEANING TECHNOLOGY

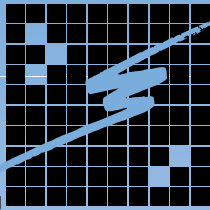

TM

# Disappear®

**MALODOR COUNTERACTANT CONCENTRATE**

DATA TECH SHEET

**PRODUCT DESCRIPTION:**

**Disappear®** effectively counteracts and cancels a broad spectrum of malodors. Use **Disappear®** in hotel rooms, restrooms, locker rooms, dining areas, transportation vehicles, veterinary establishments and nursing homes to eliminate the odor of smoke, food, garbage, human waste, animal waste, carpets and other malodors.

**FEATURES:**

**Multi-purpose Deodorizer:**

May be used as a room spray deodorizer, carpet extraction deodorizer, mop-on or spray cleaner/deodorizer, portable toilet deodorizer and drain deodorizer.

**Effective:**

Removes tough odors from fire damage, garbage, restroom, veterinary and sewage problems. Authorized by **USDA (C2)** for federally inspected meat and poultry plants.

**Economical:**

Water soluble concentrate. One gallon makes up to 128 gallons of ready to use solution.

**Pleasant Fragrance:**

Fresh spring bouquet fragrance that is not overwhelming. Low residue formula is safe for fabrics and all washable surfaces.

**PRODUCT SPECIFICATIONS:**

pH ..... 9.18 ± 0.38  
 Appearance ..... Light Green Liquid  
 Fragrance ..... Spring Bouquet  
 Freezing Point ..... About 32°F  
 Solubility in Water ..... Complete  
 Flash Point ..... None

**INGREDIENTS:**

Water ..... 7732-18-5  
 Fragrance ..... N/A  
 Octyl phenoxy poly (ethyleneoxy) ethanol ..... 9002-93-1  
 Isopropyl alcohol ..... 67-63-0

**ECOLOGICAL INFORMATION:**

- Biodegradable Surfactants
- Contains No Phosphorus
- Low VOC (Volatile Organic Chemicals)

DILUTIONS	HEALTH	FLAMMABILITY	REACTIVITY
CONCENTRATE CONCENTRAR	NFPA <b>1</b> HMIS	NFPA <b>0</b> HMIS	NFPA <b>0</b> HMIS
(1:10 RATIO) (1:10 RAZÓN)	NFPA <b>0</b> HMIS	NFPA <b>0</b> HMIS	NFPA <b>0</b> HMIS
(1:64 RATIO) (1:64 RAZÓN)	NFPA <b>0</b> HMIS	NFPA <b>0</b> HMIS	NFPA <b>0</b> HMIS
(1:128 RATIO) (1:128 RAZÓN)	NFPA <b>0</b> HMIS	NFPA <b>0</b> HMIS	NFPA <b>0</b> HMIS
PROPORCIÓN	SALUD	INFLAMABILIDAD	REACTIVIDAD

0	1	2	3	4
Minimal	Slight	Moderate	Serious	Severe
Mínimo	Mínimo	Moderar	Grave	Drástico

# Disappear<sup>®</sup> MALODOR COUNTERACTANT CONCENTRATE

DIRECTIONS

## USE INFORMATION

*Disappear<sup>®</sup> is recommended for use in Hotel Rooms, Restrooms, Dining Areas, Transportation Vehicles, Schools, Waste Receptacles, Veterinary Establishments and Nursing Homes to eliminate the odor of smoke, food, garbage, human waste, animal waste, carpets and other malodors.*



### MOP-ON CLEANING

1. **DILUTE** 1 to 2 ounces per gallon (1:128 or 1:64) of cool water.
2. **CLEAN:** Damp mop the area.
3. **DRY:** Allow to dry (10 to 15 minutes).

### CARPET CLEANING

1. **DILUTE** 1 to 2 ounces per gallon (1:128 or 1:64) of cool water with the cleaning solution in carpet extractor.
2. **EXTRACT** then force dry.

### GENERAL CLEANING

1. **DILUTE** 1 to 2 ounces per gallon (1:128 or 1:64) of cool water.
2. **SPRAY** surface. Use only as much as is required. Do not over-wet surface.
3. **WIPE** surface clean.

### DEODORIZING ROOMS & SPACES

1. **DILUTE** 12 ounces per gallon (1:10) of cool water.
2. **SPRAY** a fine mist into the center of the room.

### DEODORIZING RV, MARINE AND PORTABLE TOILET HOLDING TANKS (ALSO DRAINS)

Add 1 ounce per gallon of holding capacity.

## FIRST AID:

**If in eyes or on skin,** immediately flush with plenty of water. Get medical attention if irritation persists. **If swallowed,** get medical attention. NEVER GIVE ANYTHING BY MOUTH TO AN UNCONSCIOUS PERSON.

## HANDLING AND STORAGE:

**SUGGESTED STORAGE TEMPERATURE:** Store inside at 40-90°F. **SPECIAL HANDLING AND STORAGE:** Handle in accordance with good industrial hygiene and safety practices. These practices include avoiding unnecessary exposure and removal of material from eyes, skin and clothing. Store in a cool, dry, ventilated area. **Protect from freezing.** Thoroughly rinse empty containers. **KEEP OUT OF REACH OF CHILDREN.**

## PERSONAL PROTECTION:

**Respiratory Protection:** Not needed under normal conditions.  
**Ventilation:** Use with adequate ventilation.  
**Eye Protection:** Safety glasses are optional.  
**Protective Gloves:** Protective gloves are optional.  
**Other Protective Clothing or Equipment:** Wear clothing as necessary to prevent skin contact.

## TRANSPORTATION INFORMATION:

**U.S. DOT - Proper Shipping Name:** Not regulated by DOT.  
**Marine Pollutant:** No

MSDS FAX RETRIEVAL  
 Read MSDS before using this product  
**800-551-0101**  
 OBTENCIÓN DE HDSM POR FAX  
 Leer la HDSM antes de utilizar este producto

FOR CHEMICAL EMERGENCY,  
 SPILL, LEAK, FIRE, EXPOSURE OR ACCIDENT  
 CALL CHEMTREC DAY OR NIGHT  
**800-424-9300**  
 PARA EMERGENCIAS QUÍMICA DERRAMES,  
 ESCAPES, FUEGO, EXPOSICIÓN O ACCIDENTE  
 LLAMAR DE DÍA O DE NOCHE A CHEMTREC

**TECH HOTLINE**  
**800-810-4829**  
**LINEA DE TÉCNICA**

© FRANKLIN Cleaning Technology™ 1999 • Great Bend, KS 67530

a CPAC company

F5105TDS-0499