

Transparent Bird Gel Installation Instructions

Transparent Bird Gel - a sticky non-toxic gel used to keep pest birds off of flat surfaces. The Bird Gel creates a sticky surface that birds cannot stand, and is effective for pigeons and starlings.

Applications:

Ledges	I-Beams
Parapet Walls	Conduit
Pipes	Flat or Curved Surfaces



Specifications:


- ▲ Non toxic, safe for humans and animals
- ▲ Bird Gel comes in standard 10 oz caulk tubes, 12 tubes per case
- ▲ Each tube covers 10 feet x 3 inches wide
- ▲ Each Case covers a total of 120 feet!
- ▲ Effective at wide temperature range: 15F – 200F
- ▲ Gel will last up to 6 months outdoors

Installation:

- ▲ Transparent Bird Gel comes in a standard 10 oz caulk tube, and requires a caulk gun for application.
- ▲ Before applying, the surface should be cleaned and dry, with no loose debris.
- ▲ Apply the gel in a “zigzag” pattern about 3” long leaving periodic spaces for water drainage.
- ▲ Do not use bird gel where birds have been nesting
- ▲ Bird Gel is only to be used on flat surfaces.
- ▲ Put painter’s tape down to protect surfaces.

Clean-up / Removal:

To remove the bird gel, use mineral spirits, a solvent that can be found at most local hardware stores.

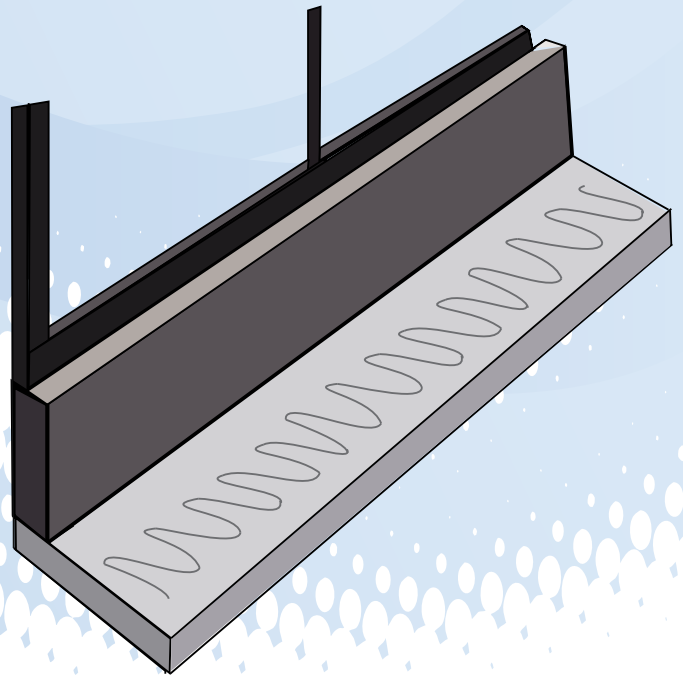

BIRD•B•GONETM
INC.
(800) 392-6915

(949) 472-3122
www.birdbgone.com
nobirds@birdbgone.com