

DEEP LUSTER™

STAINLESS STEEL CLEANER

TM

DATA TECH SHEET

PRODUCT DESCRIPTION:

DEEP LUSTER™ Stainless Steel Cleaner is a blend of water, oils and cleaning agents that is formulated to remove stains, smudges, fingerprints and other soils from steel, chrome and aluminum. It cleans down to the bare metal and leaves a protective coating that resists soils and leaves a shine. For use in schools, offices, department stores, hospitals, vehicles, restaurants, cafeterias, elevators, water fountains, nursing homes or any metal surface.

FEATURES:

Labor Saving:

Spray and wipe. The metal immediately takes on a shine that is protected against resoiling.

Efficient Cleaning:

Removes tough dirt and stains. Leaves a soil resistant barrier.

User Friendly:

Ready-to-use aerosol package simplifies application. Nothing to dilute.

PRODUCT SPECIFICATIONS:

pH	10.5 ± 0.5
Color	White Emulsion
Fragrance	Petroleum
Physical State	Liquid Under Pressure
Freezing Point	32°F
Solubility In Water	Dispersible
Warehouse Storage (NFPA)	Level 1 Aerosol
Flash Point	200°F

INGREDIENTS:

Water	7732-18-5
Mineral Oil	8042-47-5
Mineral Spirits	64742-48-9
Isobutane	75-28-5
Propane	74-98-6

DILUTIONS	HEALTH		FLAMMABILITY		REACTIVITY	
CONCENTRATE	NFPA 1	HMIS	NFPA 1	HMIS	NFPA 0	HMIS
CONCENTRAR						
PROPORCIÓN	SALUD		INFLAMABILIDAD		REACTIVIDAD	

0	1	2	3	4
Minimal	Slight	Moderate	Serious	Severe
Mínimo	Mínimo	Moderar	Grave	Drástico

ECOLOGICAL INFORMATION:


- Recyclable Steel Can (Where Available)
- VOC Compliant
- Contains No CFC's

DEEP LUSTER™ STAINLESS STEEL CLEANER

DIRECTIONS

USE INFORMATION


Do not allow spray to fall on the floor or use on floors as surface will become very slippery.

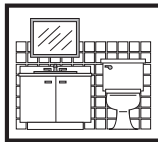

RESTROOMS



KITCHENS

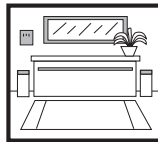

LOBBIES

DIRECTIONS FOR USE:

1. **SHAKE** can well.
2. **SPRAY** surface while holding can upright 4" to 8" from the surface. To treat small areas or avoid falling mist, **SPRAY** directly on soft cloth.
3. **WIPE** dry with a clean soft cloth.

FIRST AID:

If in eyes or on skin, immediately flush with plenty of water. Get medical attention. **If inhaled**, remove to fresh air. Get medical attention. **If swallowed**, DO NOT induce vomiting. Get medical attention. NEVER GIVE ANYTHING BY MOUTH TO AN UNCONSCIOUS PERSON.

HANDLING AND STORAGE:

SUGGESTED STORAGE TEMPERATURE: Store inside at 40-90°F. **SPECIAL HANDLING AND STORAGE:** Handle in accordance with good industrial hygiene and safety practices. These practices include avoiding unnecessary exposure and removal of material from eyes, skin and clothing. Store in a cool, dry, ventilated area. Protect from freezing. **KEEP OUT OF REACH OF CHILDREN.**

PERSONAL PROTECTION:

Respiratory Protection: Not needed in normal use.
Ventilation: Use with adequate ventilation.
Eye Protection: Safety glasses are recommended.
Protective Gloves: Protective gloves are recommended.
Other Protective Clothing or Equipment: Wear clothing as necessary to prevent skin contact.

TRANSPORTATION INFORMATION:

U.S. DOT - Proper Shipping Name: Consumer Commodity, ORM-D
Marine Pollutant: No.

MSDS FAX RETRIEVAL
Read MSDS before using this product
800-551-0101
OBTENCIÓN DE HDSM POR FAX
Leer la HDSM antes de utilizar este producto

FOR CHEMICAL EMERGENCY
SPILL, LEAK, FIRE, EXPOSURE OR ACCIDENT
CALL CHEMTREC DAY OR NIGHT
800-424-9300
PARA EMERGENCIAS QUÍMICA DERRAMES,
ESCAPES, FUEGO, EXPOSICIÓN O ACCIDENTE
LLAMAR DE DÍA O DE NOCHE A CHEMTREC

TECH HOTLINE
800-810-4829
LINEA DE TÉCNICA