

# ONE MOMENT™

## FOAMY CLEANER AND DISINFECTANT

### PRODUCT DESCRIPTION:

**One Moment™** Foamy Cleaner and Disinfectant is designed for cleaning and disinfecting for hospitals, nursing homes, schools, hotels and food processing establishments. This product is effective where housekeeping is of prime importance in controlling cross-contamination from treated surfaces. This product when used as directed, is formulated to disinfect inanimate hard non-porous surfaces such as walls, floors, sink tops, toilet bowls, chairs, tables, telephones, restrooms, shower stalls, bathtubs, hampers and cabinets. **One Moment™** Foamy Cleaner and Disinfectant deodorizes those areas which generally are hard to keep fresh smelling, such as garbage storage areas, empty garbage bins and cans, toilet bowls and other areas which are prone to odors caused by microorganisms.

### FEATURES:

**BACTERICIDAL ACTIVITY:** When used as directed, **One Moment™** Foamy Cleaner and Disinfectant exhibits effective disinfectant activity against the organisms: Staphylococcus aureus, Salmonella choleraesuis and Pseudomonas aeruginosa and meets AOAC Germicidal Spray Products Test requirements for hospital disinfectants.

**FUNGICIDAL ACTIVITY:** This product is fungicidal against the pathogenic fungi, Trichophyton mentagrophytes (Athlete's Foot Fungus) when used as directed on hard surfaces found in bathrooms, shower stalls, locker rooms, or other clean, non-porous, hard surfaces commonly contacted by bare feet.

EFFICACY TESTS HAVE DEMONSTRATED THAT **ONE MOMENT™** FOAMY CLEANER AND DISINFECTANT IS AN EFFECTIVE BACTERICIDE AND FUNGICIDE IN THE PRESENCE OF ORGANIC SOIL (5% BLOOD SERUM).

**\*VIRUCIDAL ACTIVITY:** This product when used on environmental, inanimate hard non-porous surfaces exhibits effective virucidal activity against HIV-1 (associated with AIDS).

**KILLS HIV-1 ON PRE-CLEANED ENVIRONMENTAL SURFACES/OBJECTS PREVIOUSLY SOILED WITH**

**BLOOD/BODY FLUIDS** in health care settings (Hospitals, Nursing Homes) or other settings in which there is an expected likelihood of soiling of inanimate surfaces/objects with blood or body fluids, and in which the surfaces/objects likely to be soiled with blood or body fluids can be associated with the potential for transmission of Human Immunodeficiency Virus Type I (HIV-1) (associated with AIDS).

**SPECIAL INSTRUCTIONS FOR CLEANING AND DECONTAMINATION AGAINST HIV-1 OF SURFACES/OBJECTS SOILED WITH BLOOD/BODY FLUIDS:**

**PERSONAL PROTECTION:** When handling items soiled with blood or body fluids, use disposable latex gloves, gowns, masks or eye coverings.

**CLEANING PROCEDURES:** Blood and other body fluids must be thoroughly cleaned from surfaces and objects before application of this product.

**CONTACT TIME:** Allow surface to remain wet for 10 minutes.

**DISPOSAL OF INFECTIOUS MATERIALS:** Blood and other body fluids should be autoclaved and disposed of according to local regulations for infectious waste

### PRODUCT SPECIFICATIONS:

pH	12.0 ± 0.2
Appearance	Clear
Fragrance	Citral
Physical State	Liquid Under Pressure
Freezing Point	About 32°F
Solubility In Water	Complete
Warehouse Storage (NFPA)	Level 1 Aerosol
Flash Point	None

### ACTIVE INGREDIENTS:

n-Alkyl (C <sub>14</sub> 60%, C <sub>16</sub> 30%, C <sub>18</sub> 5%, C <sub>12</sub> 5%) dimethyl ethylbenzyl ammonium chloride	0.100%
n-Alkyl (C <sub>12</sub> 68%, C <sub>14</sub> 32%) dimethylbenzyl ammonium chloride	0.100%
Other Ingredients	99.800%
<b>TOTAL</b>	<b>100.000%</b>

DILUTIONS	HEALTH	FLAMMABILITY	REACTIVITY
CONCENTRATE CONCENTRAR	NFPA <b>2</b> HMIS	NFPA <b>1</b> HMIS	NFPA <b>0</b> HMIS
PROPORCIÓN	SALUD	INFLAMABILIDAD	REACTIVIDAD

0	1	2	3	4
Minimal	Slight	Moderate	Serious	Severe
Mínimo	Mínimo	Moderar	Grave	Drástico

### EPA REGISTERED:

EPA Reg. No. 1839-84-1124      EPA Est. No. 62511-KS-1


DATA SHEET

# ONE MOMENT™ FOAMY CLEANER AND DISINFECTANT

# DIRECTIONS

## USE INFORMATION


*It is a violation of Federal Law to use this product in a manner inconsistent with labeling.*

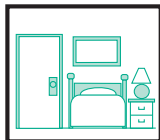

BEDROOMS



KITCHENS

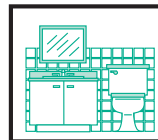

BATHROOMS

## DIRECTIONS FOR USE:

**DISINFECTION, DEODORIZATION AND CLEANING:** Shake can before using. Hold container 6 to 8 inches from surface to be treated. Spray area until it is covered with white foam. Allow foam to penetrate and remain wet for 10 minutes. No scrubbing is necessary. Wipe off with a clean cloth, mop or sponge. The product will not leave grit or soap scum. For heavily soiled areas, a pre-cleaning step is required before treatment. When used in food processing establishments, cover or remove all food and packaging materials, remove all gross soils, saturate all surfaces with the spray product, scrub to loosen all soils, allow to soak for 10 minutes, thoroughly rinse all wetted and cleaned surfaces with potable water.

**MILDEWSTAT:** To control mold and mildew on pre-cleaned, hard, non-porous surfaces spray surfaces to be treated making sure to wet completely. Let air dry. Repeat application at weekly intervals or when mildew growth appears.

### WARNING: STATEMENT OF PRACTICAL TREATMENT:

In case of contact, immediately flush eyes or skin with plenty of water for at least 15 minutes. **For eyes**, call a physician. **If swallowed**, drink egg whites or gelatin solution, or if these are not available, drink large quantities of water. Avoid alcohol. Call a physician immediately.

**NOTE TO PHYSICIAN:** Probable mucosal damage may contraindicate the use of gastric lavage.

### HANDLING AND STORAGE:

DO NOT CONTAMINATE WATER, FOOD OR FEED BY STORAGE OR DISPOSAL.

**Pesticide Disposal:** Replace cap and dispose of container in trash. Do not incinerate or puncture.

**Storage:** Store in a dry place no lower in temperature than 50°F or higher than 120°F. Thoroughly rinse empty containers.

**KEEP OUT OF REACH OF CHILDREN.**

### PERSONAL PROTECTION:

**Respiratory Protection:** Not needed in normal use.

**Ventilation:** Use with adequate ventilation.

**Eye Protection:** Safety glasses are recommended.

**Protective Gloves:** Protective gloves are recommended.

**Other Protective Clothing or Equipment:** Wear clothing as necessary to prevent skin contact.

### TRANSPORTATION INFORMATION:

**U.S. DOT - Proper Shipping Name:** Consumer Commodity ORM-D

**Marine Pollutant:** No.

MSDS FAX RETRIEVAL  
Read MSDS before using this product

**800-551-0101**

OBTENCIÓN DE HDSM POR FAX  
Leer la HDSM antes de utilizar este producto

FOR CHEMICAL EMERGENCY,  
SPILL, LEAK, FIRE, EXPOSURE OR ACCIDENT  
CALL CHEMTREC DAY OR NIGHT

**800-424-9300**

PARA EMERGENCIAS QUÍMICA DERRAMES,  
ESCAPES, FUEGO, EXPOSICIÓN O ACCIDENTE  
LLAMAR DE DÍA O DE NOCHE A CHEMTREC

**TECH HOTLINE**  
**800-810-4829**  
**LINEA DE TÉCNICA**