



TOUCHLESS MICROTEK CLEANING SYSTEM

YOUR TOTAL MICROFIBER CLEANING SYSTEM

"For use anywhere that cross-contamination is an issue or concern"

The ErgoWorx™ Touchless Microtek Cleaning System is ideal for these environments:

- Health Care
- Acute Care
- Clinics
- Hospitals
- Long Term Care
- Schools
- Nursing Homes
- Doctors' Offices
- Institutions

The ErgoWorx™ Touchless Microtek Cleaning System includes:

- Launderable Refills
- Disposable Refills
- Frames
- Handles
- Buckets
- General Purpose Cleaning Cloths
- Smooth Surface Cleaning Cloths
- Dusters
- Laundry Care Bag



Patented





**TOUCHLESS MICROTEK
CLEANING SYSTEM**



Continental Commercial Products® introduces the first truly **Touchless Microfiber Cleaning System**.

Continental Commercial Products® has always been focused on developing more effective ways to clean. We've taken the advanced science of Microfiber and created a complete "SYSTEM" which will significantly reduce the risk of cross-contamination when cleaning and disinfecting rooms.

The ErgoWorx™ Touchless Microtek Cleaning System

- EFFECTIVE** Truly a touch free system, eliminating the cleaner's contact with contaminated mop heads.
- INTUITIVE** Easy to use, reduces cost and time for training.
- AFFORDABLE** No costly wringers, pumps, trolley carts, etc.

FEATURES

- The newest addition to the ErgoWorx™ system, the Microfiber Trolley. This trolley can be added to the SYS-5 to create a mobile cleaning system that is both compact and efficient. The 3" non-marking, all swivel casters provide finger touch mobility, ideal for tight hallways and small rooms. The MFT-5 is designed to accommodate common cleaning tools including a wet floor sign, microflex duster, wipes and RTU trigger sprayer bottles.
- The ErgoWorx™ System is designed to fit all the most popular plastic and stainless steel Janitorial Carts made in the U.S. today.
- The ErgoWorx™ Solution and Discharge buckets are made from Derma-Tek™, non-porous plastic so they are easy to clean and help maintain a professional appearance. The Auto-Discharge mop frame is made from strong and durable glass filled nylon.
- ErgoWorx™ SYS-5 is completely non-ferrous, so it is safe for use in areas with MRI equipment and will not rust or corrode.
- Exclusive to CCP, the patented ErgoWorx™ Touchless, Auto-Discharge Mop Frame eliminates the need to touch the soiled/contaminated Microfiber mop head, preventing cross-contamination.

ENVIRONMENTS

The ErgoWorx™ Touchless Microtek Cleaning System is best suited for these environments:



HEALTH CARE
Hospitals • Acute Care
Nursing Homes • Clinics
Doctors' Offices



SCHOOLS
Pre-School • Elementary
Secondary



INSTITUTIONS
Minimum Security
Maximum Security

PRODUCT CARE

In order to receive the maximum use out of your Microfiber refills, the following Care Instructions must be followed.


Operation	Water Level	Temp.	Time (Min)	Chemical (per 100 lbs)
Flush	High	120°-130°F	4	3 oz. Alkaline Builder
Flush	High	120°-130°F	2	-----
Break	Low	140°-145°F	15	High Surfactant/Deterg
Bleach	Low	150°-155°F	10	3 oz. Oxygen Bleach
Rinse	High	140°-145°F	2	-----
Rinse	High	120°-130°F	2	-----
Sour	Low	50°-80°F	5	1 oz. Sour

*Microfiber refills should be tumbled dry at or below temps of 130°F.

The use of fabric softener is never recommended. Washing unit should be loaded to full capacity. Follow washing instructions on product labels where applicable. Bleach will shorten product life.

WHAT IS MICROFIBER?

Microfiber is an ultrafine synthetic fiber that is very durable and lint free. Each fiber is split during the manufacturing process which creates unique shapes for effective mopping. Unlike conventional mop yarns each strand of Microfiber is wedge shaped with sharp edges which makes it very effective for removing, absorbing and accumulating virtually any type of dirt, dust, grease or contaminant. Our Microfiber refills are made to the specifications of 3 microns where most bacteria and dirt are between 4 and 9 microns.

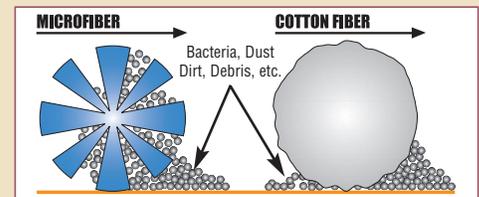

Microfiber cleaning truly offers many health and safety benefits along with tangible cost benefits which makes Continental Commercial Products **Ergoworx™ Touchless Microtek Cleaning System** the clear choice for your Microfiber cleaning needs.



**TOUCHLESS MICROTEK
CLEANING SYSTEM**

ERGOWORX™ 6 STEP SYSTEM

1



Place clean refill on perforated screen.

2



Attach bottom of Auto-Discharge Microfiber frame to refill.

3



Place refill in Microfiber Solution Bucket and let the refill absorb enough liquid to allow for a 10 minute dwell time on the floor.

4



Place refill on perforated screen to allow excess liquid to be removed from refill.

5




Start from farthest corner of the room, away from the door or entrance and begin flat mopping in an "S" pattern, keeping the dirt behind the refill, moving backwards towards the door or entrance.

6



Place Auto-Discharge frame clips on discharge rod and press down. Refill will discard into discharge bucket.

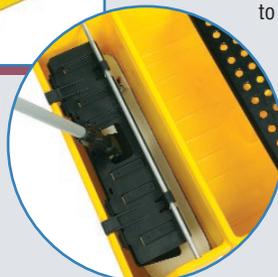

Built-in hooks to hold mops.


Solution Bucket comes with a durable, snap-on screen to allow for removal of excess chemical solution from the Microfiber mop.

Solution Bucket screen has sturdy center support gusset to prevent screen deflection.

Solution Bucket (CB-5YW) is graduated in both US gallons and Metric liters for ease of use, total capacity is 5 gal (20L).


Solution Bucket and Discharge Rod 'lock' together to create a stable unit for increased stability and safety.

**Continental Commercial Products® introduces the first truly
Touchless Microfiber Cleaning System.**

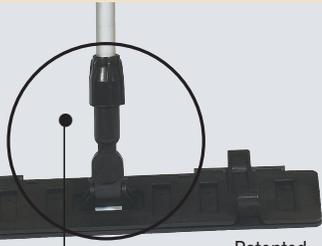

Patented

Universal swivel joint has cross-pin and ferrule nut connector for a secure and positive lock, fits both telescopic or fixed length aluminum mop handles.

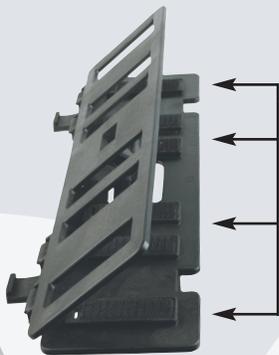

Ultrasonically welded Velcro® strips will not pull away over time and provide a sure grip for the Microfiber flat mops.

Auto-Discharge Mop Frame is made from super-tough, glass filled nylon for strength and durability, as well as, chemical resistance.

ErgoWorx Auto-Discharge Mop Frame is designed to work with the industry standard 20" Microfiber flat mops.



Soiled/contaminated Microfiber mops are released into the Discharge Bucket via a unique, exclusive process.



SYS-5 shown on
184GY Janitorial Cart



SYS-5 shown on
182BL Janitorial Cart



Charge Bucket
a single unit
ease of use.

Discharge Bucket (SB-5YW) is designed to accommodate between 12 and 18 Microfiber flat mops.



Optional fitted laundry net can be inserted into Discharge Bucket for easy removal of soiled/contaminated Microfiber mops.

COMPLETE LINE OF MICROFIBER PRODUCTS



Super Pro II™ Microfiber Refill

Looped-end construction and durable Microfiber for long product life. Made of 100% Microfiber, launderable up to 500 times. Perma-Stitch sewn border for extreme durability. Hook and loop attachment for easy installation and removal from frame. Use for damp or dry mopping.



The Duster™ Microfiber Refill

Specially designed to attract dust much like a cut-end dust mop but has the strength and durability of Microfiber. Use to pick larger particles before damp mopping or disinfecting. Can be laundered 100 to 150 times.



Microfiber Pro II™ Flat Mop Frame

Pro II Flat mop frames' light weight design allows for dramatic improvements in labor productivity. Trapezoid head effectively cleans corners and edges. 360 degree swivel attachment for maneuvering in tight areas. Handle Locking Clip to secure handle to frame connector. Designed to compliment our line of Microfiber refills.



Microfiber Pro™ Flat Mop Handles

Pro handles are made of lightweight, long-lasting aluminum that won't rust or corrode. Twist-lock mechanism allows extendible handle to adjust from 39" to 60" Available in extendible and 60" fixed sizes.



Microlooped Dust Mop

This mop will pick up twice as much dirt as a 100% cotton, cut-end dust mop. Can be used as a wax application mop. Fits any standard mop frame. Can be laundered 150 times.



902-3 or 922-3 ProSafe Sprayers

These bottles come in a pack of three, have a product check-off grid and provide bilingual information to help compliance with the "Right to Know" regulations. 24 ounce bottle with either a 902H or a 922H sprayer.



The Aggressor™ Microfiber Scrubbing Refill

Innovative combination of Microfiber yarn and synthetic stiff brush fibers. It's designed to remove debris stuck to the floor that normal "yarn only" Microfiber flat mops cannot.



Charger™ Disposable Sheets

The Disposable Charger™ Dust Mop picks up dust, dirt and hair by creating a static charge and trapping the debris within the mops' tiny fibers. Using this in-expensive, disposable dust mop aids in Cross-Contamination Prevention for Health Care environments. The Charger™ mops come conveniently packed in 200 pre-cut sheets per box and attaches easily to the SpringBack™ mop frame.



SpringBack™ Mop Frame

This heavy-duty aluminum frame, with its spring loaded attachment, will hold up to 3 Charger™ disposable sheets. Removable 1/4" thick foam pad allows for easy maneuvering while dry dust mopping. This frame can also be used with our 26" Microfiber refill pads. Frames can be used with our current Pro Flat Mop handles.



Finish Mop Microfiber Refill

The Microfiber Finish Flat Mop is looped-end and constructed of high-wet modulus rayon blend yarn that provides quick, controlled liquid release. The finish flat mop will cover a 20" wide swath. Unlike conventional finish mops, 100% of the floor finish goes onto the floor along with full contact of the refill to the surface allowing better productivity and less chemical wasted in the mop.



Microflex™ Duster

Latest in Microfiber technology. Flexible, thin foam frame allows for effective cleaning in tight, hard-to-reach areas. Frame accepts a hand held handle or either one of our Pro Flat mop handles for high area cleaning. Microfiber refill for durability and long product life. Simply rinse away dirt with water after every use. Duster refill available separately.



Supremo™ Microfiber Cloths & Mitts

All purpose cleaning cloth. Great for dusting and cleaning all types of surfaces.



Glassic™ Microfiber Cloth

Ideal for cleaning soap, grease or finger prints from windows, mirrors and metal surfaces. Leaves a streak-free finish.



Laundry Net Bag

Made of 100% polyester net with drawstring lock closure. This bag is perfect for discarding into and transporting dirty Microfiber refills to the laundry. Designed to fit perfectly in the Ergoworx™ Microfiber Discharge Bucket.

SPECIFICATION GUIDE

Item #	Description	Color	Dimensions	Case/Pack	Case Cube
ERGOWORX™ TOUCHLESS MICROTEK CLEANING SYSTEM					
CB-5YW	ERGOWORX™ SOLUTION BUCKET WITH PERFORATED SCREEN, FIVE GALLON - YELLOW W/ BLACK SCREEN	YELLOW/BLACK	22" x 12 ³ / ₈ " x 11 ⁵ / ₈ "	1	1.910
SB-5YW	ERGOWORX™ DISCHARGE BUCKET W/ ALUMINUM DISCHARGE ROD	YELLOW	22" x 8" x 11 ¹ / ₈ "	1	1.280
MF-5BK	ERGOWORX™ AUTO-DISCHARGE MOP FRAME	BLACK	18" x 5 ⁵ / ₈ " x 1 ³ / ₄ "	1	0.160
MFT-5BK	MICROFIBER TROLLEY FOR SYS-5	BLACK	31 ³ / ₄ " x 23" x 38 ¹ / ₂ "	1	2.270
SYS-5	ERGOWORX™ TOUCHLESS MICROTEK CLEANING SYSTEM, COMPLETE – INCLUDES: 1 EA SOLUTION BUCKET W/ SCREEN, 1 EA DISCHARGE BUCKET W/ ALUMINUM DISCHARGE ROD AND 1 EA AUTO-DISCHARGE MICROFIBER MOP FRAME	YELLOW/BLACK	22" x 19 ⁷ / ₈ " x 11 ⁵ / ₈ "	1	2.640
REFILLS					
C103012	SUPER PRO II™ MICROFIBER REFILL	BLUE	5" x 12"	10	0.180
C103020	SUPER PRO II™ MICROFIBER REFILL	BLUE	5" x 20"	10	0.277
C103026	SUPER PRO II™ MICROFIBER REFILL	BLUE	5" x 26"	10	0.361
C104012	SUPER PRO II™ MICROFIBER REFILL	RED	5" x 12"	10	0.180
C104020	SUPER PRO II™ MICROFIBER REFILL	RED	5" x 20"	10	0.277
C104026	SUPER PRO II™ MICROFIBER REFILL	RED	5" x 26"	10	0.361
C107012	SUPER PRO II™ MICROFIBER REFILL	YELLOW	5" x 12"	10	0.180
C107020	SUPER PRO II™ MICROFIBER REFILL	YELLOW	5" x 20"	10	0.277
C107026	SUPER PRO II™ MICROFIBER REFILL	YELLOW	5" x 26"	10	0.361
C108012	SUPER PRO II™ MICROFIBER REFILL	GREEN	5" x 12"	10	0.180
C108020	SUPER PRO II™ MICROFIBER REFILL	GREEN	5" x 20"	10	0.277
C108026	SUPER PRO II™ MICROFIBER REFILL	GREEN	5" x 26"	10	0.361
C109020	THE AGGRESSOR™ MICROFIBER REFILL	BLUE/WHITE	5" x 20"	10	0.404
C109026	THE AGGRESSOR™ MICROFIBER REFILL	BLUE/WHITE	5" x 26"	10	0.519
C110020	THE DUSTER™ MICROFIBER REFILL	WHITE	5" x 20"	10	0.208
C110026	THE DUSTER™ MICROFIBER REFILL	WHITE	5" x 26"	10	0.270
C106020	SUPER PRO™ FINISH MOP	LIGHT BLUE	5" x 20"	6	0.276
C429000	CHARGER™ MOP DISPOSABLE REFILL	WHITE	8" x 26"	200	1.523
FRAMES					
C717010	PRO II™ FLAT MOP FRAME-FOR 12" MOPS	SILVER/BLUE	4 ³ / ₄ " x 10"	10	0.478
C717018	PRO II™ FLAT MOP FRAME-FOR 20" MOPS	SILVER/BLUE	4 ³ / ₄ " x 18"	10	0.857
C717024	PRO II™ FLAT MOP FRAME-FOR 26" MOPS	SILVER/BLUE	4 ³ / ₄ " x 24"	10	0.153
C716024	SPRINGBACK™ MOP FRAME-FOR CHARGER™ MOP COVERS	SILVER	3 ¹ / ₂ " x 24"	10	1.038
HANDLES					
C714060	PRO™ FLAT MOP HANDLE	SILVER/BLUE	60" FIXED	10	0.631
C714000	PRO™ FLAT MOP HANDLE	SILVER/BLUE	39" to 60"	10	0.439
CLEANING CLOTHS & MITTS					
E220000	SUPREMO™ MICROFIBER CLOTH	GREEN	12" x 12"	12	0.168
E221000	SUPREMO™ MICROFIBER CLOTH	BLUE	12" x 12"	12	0.168
E222000	GLASSIC™ MICROFIBER CLOTH	GREEN	12" x 12"	12	0.168
E223000	GLASSIC™ MICROFIBER CLOTH	BLUE	12" x 12"	12	0.168
E220022	SUPREMO™ MICROFIBER MITT	GREEN	10" x 7"	12	0.315
E221022	SUPREMO™ MICROFIBER MITT	BLUE	10" x 7"	12	0.315
E222022	GLASSIC™ MICROFIBER MITT	GREEN	10" x 7"	12	0.393
E223022	GLASSIC™ MICROFIBER MITT	BLUE	10" x 7"	12	0.393
DUSTER					
E224000	MICROFLEX™ DUSTER COMPLETE	N/A	2" x 27"	1	0.170
E224100	MICROFLEX™ DUSTER REFILL	LIGHT GREEN	2" x 22"	3	0.060
MICROFIBER MOPS					
C090018	MICROLOOPEED DUST MOP	BLUE	5" X 18"	12	0.810
C090024	MICROLOOPEED DUST MOP	BLUE	5" X 24"	12	1.070
C090036	MICROLOOPEED DUST MOP	BLUE	5" X 36"	12	1.600
C090048	MICROLOOPEED DUST MOP	BLUE	5" X 48"	6	1.070
A09001	DURALOOP WET MOP, 5" HEADBAND	BLUE	SMALL	12	0.740
A09002	DURALOOP WET MOP, 5" HEADBAND	BLUE	MEDIUM	12	0.970
A09003	DURALOOP WET MOP, 5" HEADBAND	BLUE	LARGE	12	1.260
LAUNDRY BAG					
A80805	MICROFIBER LAUNDRY BAG	WHITE	21" x 6 ³ / ₄ " x 9 ¹ / ₂ "	5	0.626
JANITORIAL CARTS					
182	JANITOR CART, COMPACT	BLUE OR GRAY	43 ¹ / ₂ " x 20 ³ / ₄ " x 38"	1	5.360
184	JANITOR CART, STANDARD	BLUE OR GRAY	55 ⁵ / ₈ " x 20 ³ / ₄ " x 38"	1	6.400
186	JANITOR CART, CONVERTIBLE	BLUE OR GRAY	73 ⁷ / ₈ " x 20 ³ / ₄ " x 38"	1	6.770



305 Rock Industrial Park Drive, Bridgeton, MO 63044
Phone: 314.656.4301 • Fax: 314.770.9938



60 Belfield Road, Toronto, Ontario Canada M9W 1G1
Phone: 800.387.5100 • Fax: 800.873.1814