


FRANKLIN
CLEANING TECHNOLOGY



TM

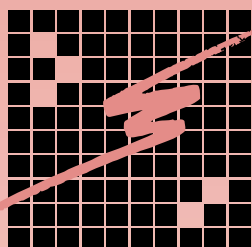

F3804-2

#21 Answer™

MULTI-USE CARPET CLEANER

DAWGLIGHTS

PRODUCT DESCRIPTION:

Answer™ Multi-Use Carpet Cleaner works aggressively to release carpet soils in 4 ways - as a **spotter**, a **pre-spray**, a **spin clean** and an **extraction cleaner**. This unique formulation satisfies many carpet cleaning requirements and provides safe/carefree maintenance of carpets. As a spotter it removes tough soils such as food, pet stains and even dirty motor oil. As a pre-spray, spin clean or extraction cleaner it brings these tough soils away from the carpet fibers without leaving a residue that can attract soils.

Answer™ Multi-Use Carpet Cleaner is formulated with a fresh **apple scent** and looks like apple cider.

FEATURES:

Safe to Use:

Contains no solvents or harsh alkalis. It has a neutral pH and is approved by the **Wool's of New Zealand**.



Free Rinsing:

Easily rinses tough soils away from carpet fibers. Contains no components that void the new generation "stain resistant" carpet warranties. Its low foaming properties make carpet cleaning easy and efficient.

Environmentally Friendly:

Ultra concentrated biodegradable formula reduces packaging and eliminates solvent spotters.

PRODUCT SPECIFICATIONS:

pH (concentrate)	8.0 ± .5
pH (at 1:32)	6.8 ± .5
pH (at 1:64)	6.7 ± .5
pH (at 1:128)	6.4 ± .5
Color	"Apple Cider" or Light Brown
Physical State	Concentrated Liquid
Fragrance	Fresh Apple
Freezing Point	About 32°F
Solvents	None
Solubility H2O	Complete
Flash Point	None

INGREDIENTS:

Water	7732-18-5
Tetrasodium EDTA	64-02-8
NJ TSRN	100555-5004
NJ TSRN	027586004-8003P
Dicarboxylic Acid	53980-88-4

ECOLOGICAL INFORMATION:

- Biodegradable Surfactants
- Neutral pH
- Low VOC
- Contains no Phosphorus

DILUTIONS	HEALTH		FLAMMABILITY		REACTIVITY		
CONCENTRATE	NFPA	2	HMIS	NFPA	0	HMIS	0
(1:32 RATIO)	NFPA	1	HMIS	NFPA	0	HMIS	0
(1:64 RATIO)	NFPA	0	HMIS	NFPA	0	HMIS	0


0		1		2		3		4	
Minimal	Slight	Moderate	Serious	Severe					
Mínimo	Mínimo	Moderar	Grave	Drástico					

#21 Answer™ MULTI-USE CARPET CLEANER; FOUR FORMULAS IN ONE: PRE-SPRAY, SPIN CLEAN, EXTRACTION AND SPOTTER

DIRECTIONS

USE INFORMATION:

Always thoroughly vacuum the carpet and remove any attached deposits prior to use. If there is a question of the carpet's colorfastness, always pre-test in an inconspicuous area. The Lightning Blend proportioner can be preset to deliver various dilutions as needed for the different product usages. Use the diluted product as directed.

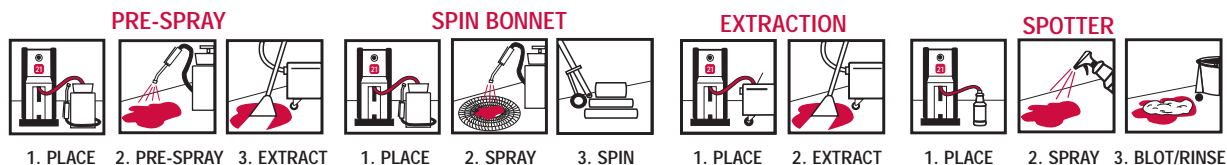

PRE-SPRAY

1. **PLACE** discharge tube into sprayer, select the appropriate dilution - 2 ounces per gallon (1:64 ratio) and fill.
2. **PRE-SPRAY** the carpet using a tank sprayer or electric sprayer. Allow a 15 minute dwell time for maximum results.
3. **EXTRACT** or **SPIN CLEAN** with Answer™, then force dry the carpet.

SPIN BONNET:

1. **PLACE** discharge tube into sprayer, select the appropriate dilution - 1 ounce per gallon (1:128 ratio) and fill.
2. **SPRAY** or treat the bonnet and carpet.
3. **SPIN CLEAN** using a low speed rotary machine (175-300 rpm) and appropriate driver and a spin bonnet.

EXTRACTION

1. **PLACE** discharge tube into solution tank, select the appropriate dilution - 1 ounce per gallon (1:128 ratio) and fill.
2. **EXTRACT**, then force dry the carpet.

SPOTTER

1. **PLACE** discharge tube into sprayer, select the appropriate dilution - 4 ounces per gallon (1:32 ratio) and fill.
2. **SPRAY** the outer edges of the stain first, then center of stain.
3. **BLOT & RINSE:** Blot with a clean cloth and rinse with clean water, then repeat blotting.

FIRST AID:

If in eyes or on skin, immediately flush with plenty of water for at least 15 minutes. Get medical attention. **If swallowed**, get medical attention. NEVER GIVE ANYTHING BY MOUTH TO AN UNCONSCIOUS PERSON.

HANDLING AND STORAGE:

SUGGESTED STORAGE TEMPERATURE: Store inside at 40-90°F. **SPECIAL HANDLING AND STORAGE:** Handle in accordance with good industrial hygiene and safety practices. These practices include avoiding unnecessary exposure and removal of material from eyes, skin and clothing. Store in a cool, dry, ventilated area. **Protect from freezing.** Thoroughly rinse empty containers. **KEEP OUT OF REACH OF CHILDREN.**

PERSONAL PROTECTION:

Respiratory Protection: Not needed in normal use of this product.

Ventilation: Use with adequate ventilation.

Eye Protection: Safety goggles are recommended.

Protective Gloves: Protective gloves are optional.

Other Protective Clothing or Equipment: Wear clothing as necessary to prevent skin contact.



TRANSPORTATION INFORMATION:

U.S. DOT - Proper Shipping Name: Not regulated by DOT.

Marine Pollutant: No

MSDS FAX RETRIEVAL

Read MSDS before using this product

800-551-0101

OBTENCIÓN DE HDSM POR FAX
Leer la HDSM antes de utilizar este producto

FOR CHEMICAL EMERGENCY,
SPILL, LEAK, FIRE, EXPOSURE OR ACCIDENT
CALL CHEMTREC DAY OR NIGHT

800-424-9300

PARA EMERGENCIAS QUÍMICA DERRAMES,
ESCAPES, FUEGO, EXPOSICIÓN O ACCIDENTE
LLAMAR DE DÍA O DE NOCHE A CHEMTREC

TECH HOTLINE

800-810-4829

LINEA DE TÉCNICA