

# PULLMAN-HOLT®

phc.com

## Model 45-20POV

The 45-20POV is a wet vacuum, specially designed for high volume pick-up of slurries, spills and for water damage projects. The 45-20POV has the same air-flow and waterlift as our popular 45HEPA vacuum so it provides the power and performance to meet the needs of a professional contractor. Equipped with a 40 GPM discharge pump built-in inside a 20 gallon tank, the 45-20POV can empty the tank continuously without interruption to the vacuuming process.

### Features:

- 2 HP commercial grade, 2-stage bypass motor for fast, superior pick-up and long life
- Immersible pump provides continuous discharge up to 100 feet away
- Mesh bag inlet screen captures large particles preventing interruptions of flow. Bag can be emptied and replaced in seconds
- Reliable wet shut-off system to prevent liquids from reaching the motor
- Rotational molded polyethylene tank with built-in handle, large rear wheels and front swivel casters. High-impact resistant tank will not dent, puncture or lose airseal. Has superior mobility, even when going up and down stairs with full tank of water



### Technical Specifications:

Model	45-20POV
Product code:	B100450
Waterlift:	105"
Amps (vacuum only):	10
Amps (vacuum/pump):	14.5
Pump watts:	550
Pump GPM:	40
Tank size Gal:	20
Wet Shut-off:	Float cage with mesh screen
Power cord:	50-feet
Weight:	70 lbs.

### Accessories:

- 1-inch X 35-foot drain hose
- 20' X 1.5" crushproof hose



# PULLMAN-HOLT

Model 45-20POV

Heavy-duty lift handle with cord hook for safe and easy lifting and transport

50-foot power cord allows for use without extension cord

Separate on/off switches for vacuum and pump



Positive locking, full swivel hose connection system with button latch for easy handling and operation



Motor head mounted electrical outlet for immersible pump




Injection molded motorhead with low noise design allows for operation in sound sensitive areas

Immersible pump and mesh filter bag for intercepting large particles



2HP commercial grade, two-stage motor  
Fast and superior pick-up, both wet and dry  
Includes one year warranty - parts and labor

Heavy-duty brass quick disconnect for drain hose

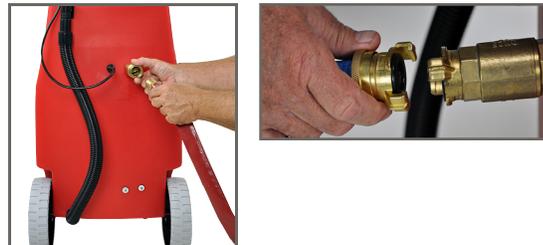

10" Rear Wheels, 4" heavy-duty front caster  
Transports easily even with a full tank of liquid

should we add:  
Optional squeegee kit available

