




THE PEAK OF SAFETY AND STYLE™

NEW! V2G-XP™

First in class, multi-functional goggle with 180° vision protection against chemical splash, sun glare, dust, flying particles, wind, and harmful UV rays.



Dual pane lens provides the ultimate anti-fog performance by isolating the temperature difference inside & outside of this eyewear.

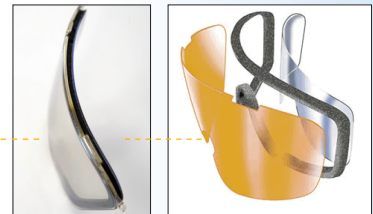

Special indirect ventilation system



Dual Pane Thermo Lens System



TPU Frame forms perfect facial seal



Wide Adjustable Elastic Strap with Quick Release Clasp

V2G-XP FEATURES.....

Dual Pane lens combines optically correct polycarbonate outer lens with interior acetate lens to create a Thermo Lens System which traps and isolates high heat or extreme cold in between the lens system and away from the face.

The Thermo Lens System provides excellent resistance to fogging caused by the temperature difference between indoor & outdoor or between on-site and ambient environment.

TPU frame features excellent resistance to cold & heat & provides a perfect facial seal.

Special indirect ventilation system located at the top and bottom of frame allow air flow & heat release.

Includes a wide adjustable elastic strap with quick release system for secure fit.

Optional RX-insert frame secures in the inner side of frame.

H₂X New anti-fog technology blocks out fog, mist, sweat and steam. Lenses remain unaffected 15 times longer than other anti-fog treatments

H₂X



Part #	Description
GB6410SDT	Black Frame with Dual Clear Anti-fog Lens
GB6420SDT	Black Frame with Dual Gray Anti-fog Lens
RX6400	RX Insert for V2G-XP

